About the setting and DEYE inverter to and Chisage MOON-16 battery.


First we connect the cables red and black to battery and inverter, about the communication cable:

1. Use the yellow cable and plug it in the inverter BMS port, and to can port to battery, please do the battery as here, cable to CAN port of the battery and all switches down, when we have more than one we use the setting from the manual for each battery:



2. In the inverter, go to battery setting and do as here all the menu:




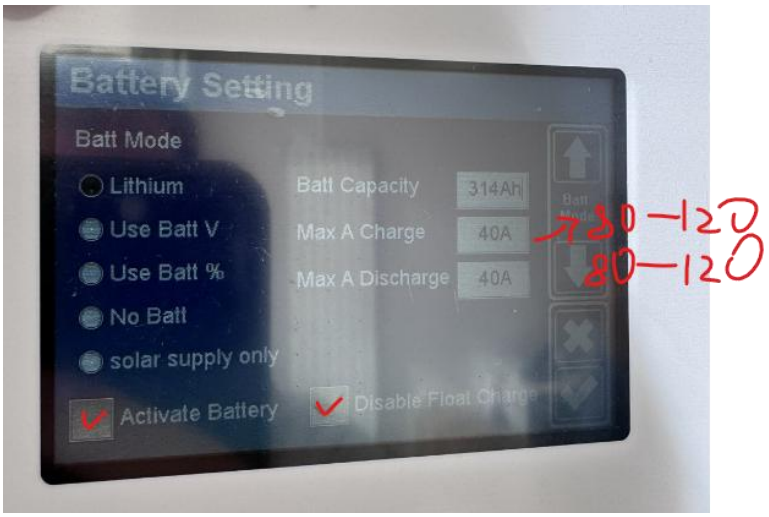


3. Battery second menu you can leave at 30% and 40 amp




4. Battery 3-th menu

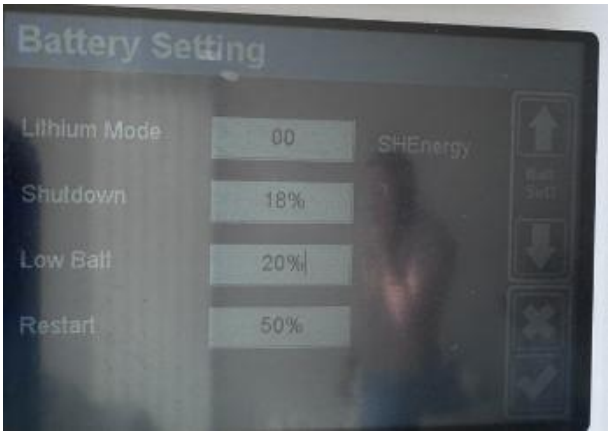

5. After settings we have to check what we do, and we have to go here

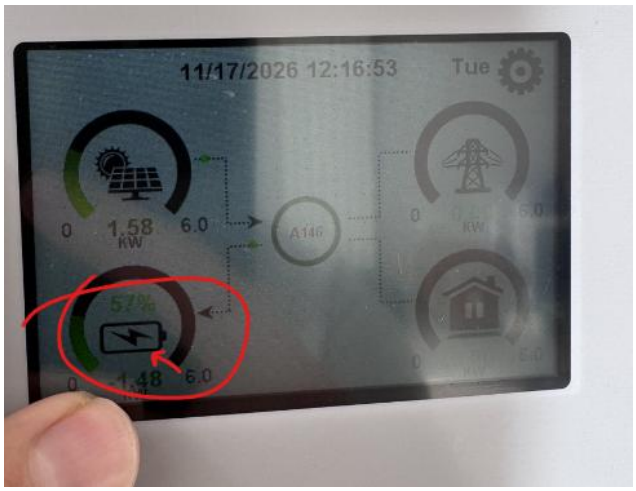

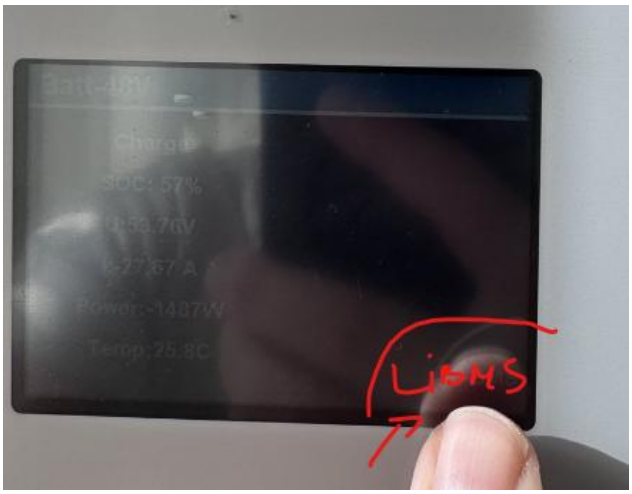

send me this image, if we have numbers here we suceed:

